

## Call Forward

Program a memory key to forward incoming calls to another party (internal or external).

1. Long press (5 seconds) the memory key to program  
\* **OR** \*  
Press Menu **Features** **DSS Keys**  
*There are 10 programmable Keys on the side of the phone*  
Select the desired key (1 =top key, 1 0=bottom key)  
Press the Call Forward key to activate/deactivate the forwarding.

The screen will display:



3. Use < or > or *Switch* to change parameter in each field  
Use down arrow (>) to select next field

Type = Key Event  
Key Type= Forward  
Value= The extension or phone number to forward to

2. Press OK or *Save*

*The first time the Forward key is pressed, phone will display a prompt for Forwarding Mode*

Use > to select *Enable*  
Use down arrow to select Forward To  
Enter the extension or phone number to forward to  
Press OK or *Save*

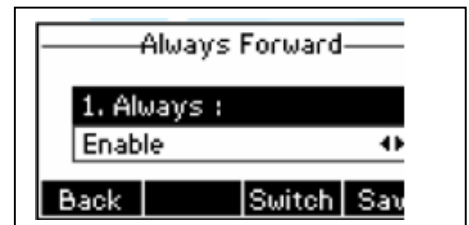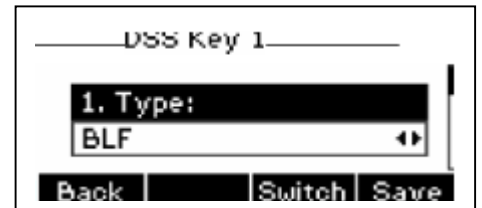

The button will be lit when phone is forwarded.